

E-SDC Initialization

Prior to the first use, the E-SDC has to be initialized. E-SDC must have access to the Secure Element during the initialization process in order to establish a secure connection with the TaxCore.API to obtain a set of initialization commands. The initialization commands are explained in the section [Commands](#).

For instructions on how to download the initialization commands, see [Get Initialization Commands](#).

After processing the received initialization commands, the E-SDC must upload configuration commands results to TaxCore.API.

In case of a poor or no internet connection, configuration commands results can be uploaded via file-based communication as explained in section [E-SDC Stores a Command Execution Result to the SD Card or USB Drive](#).

NOTE:

Initialization of E-SDC has to be performed each time a new smart card is inserted into the reader.